



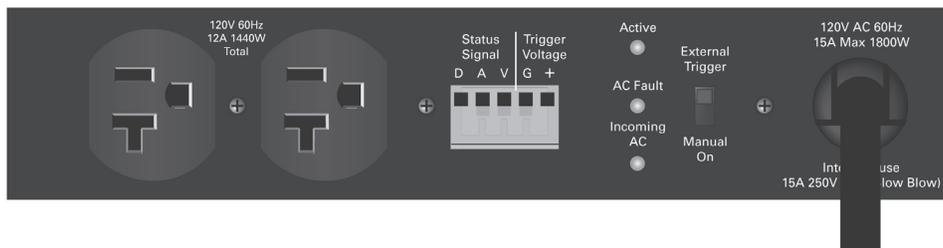

ECM-15SH AC Power Conditioning & Suppression Module

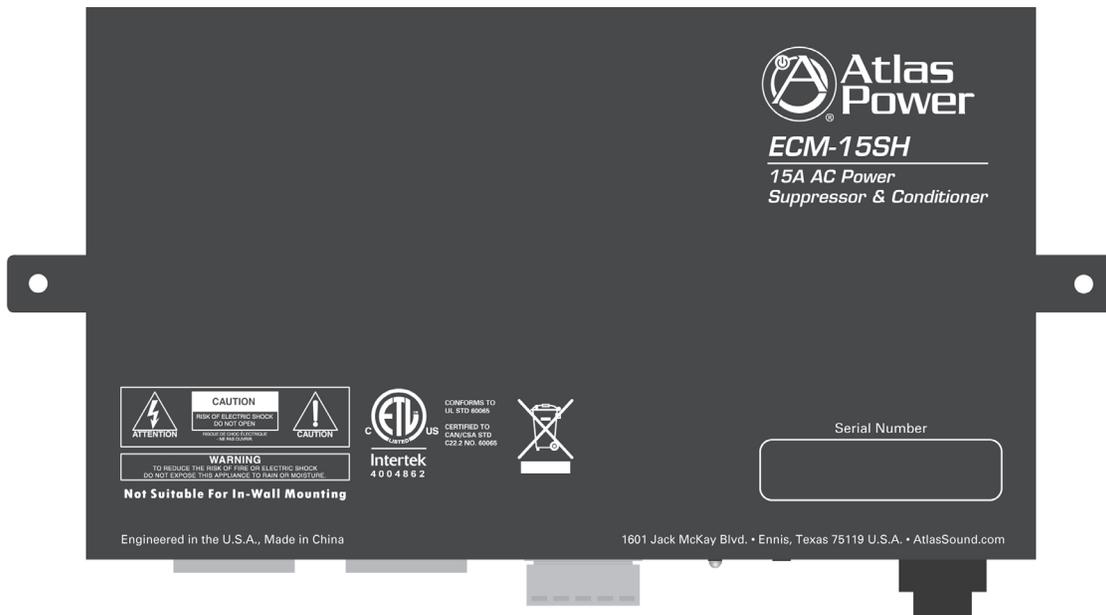

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH

AC Power Conditioner & Suppression Module

Table of Contents

Safety Instructions	3
Introduction	5
Key Features	5
Applications	5
Internal Features	6
Wire & Data Considerations.....	6
Panel Features.....	7
Using the ECM-15SH as a Standalone Unit.....	8
ECM-15SH Remote Activation via External Switch	8
ECM-15SH Remote Activation External DCV	8
ECM-15SH Interfaced with an ECS-6RM Sequence Controller.....	8
ECM-15SH Interfaced with an ECS-3 Sequence Controller.....	10
Mounting the ECM-15SH.....	10
Troubleshooting as a Standalone unit	11
Troubleshooting using the ECM-15SH with an ECS-3 Controller.....	11
Troubleshooting using the ECM-15SH with an ECS-6RM Controller.....	12
AC Power Cord Retainer System.....	14
Specifications	15
Warranty.....	16



**Atlas
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



Important Safety Instructions



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this device near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other device (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.
13. Unplug this device during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, this device should not be exposed to rain or moisture and objects filled with liquids, such as a vase, should not be placed on this device.
16. To completely disconnect this equipment from the mains, disconnect the power supply cord plug from the receptacle.
17. The mains plug of the power supply cord shall remain readily operable.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH **AC Power Conditioner & Suppression Module**



WARNING When The Device Is In Use

- To prevent electric shock, do not remove the product cover as there are high voltage components inside. Refer all servicing to Atlas Sound.
- Should any of the following irregularities occur during use, immediately switch off the power, disconnect the power cord from the AC outlet and contact Atlas Sound. Do not attempt to continue operation with the product as this may cause fire or electric shock:
 - Smoke or strange smell coming from the unit.
 - If the product falls or the case is damaged.
 - If water or any metallic objects falls into the product.
 - If the power supply cord is damaged in any way.
 - If the unit is malfunctioning.
- Do not insert or drop metallic objects or flammable materials into the ventilation holes of the product's cover, as this may result in electric shock or fire.
- Do not place any containers with liquid or metallic objects on the top of the product. If any liquid spills into the unit, fire or electric shock may result.
- Never operate this product or touch the power supply cord during an electrical storm, electric shock may result.
- Never exceed the power rating on the product when connecting equipment. Fire and/or property damage may result.
- Operate the product only with the voltage specified on the unit. Fire and/or electric shock may result if a higher voltage is used.
- Do not modify, kink, or cut the power cord. Do not place the power cord in close proximity to heaters and do not place heavy objects on the power cord, including the product itself, doing so may result in fire or electrical shock.
- Ensure that the safety ground terminal is connected to a proper ground. Never connect the ground to a gas pipe as a catastrophic disaster may result.
- Be sure the installation of the product is stable, avoid slanted surfaces as the product may fall and cause injury or property damage.



CAUTION When Installing The Product

- Plugging in or unplugging the power cord with wet hands may result in electric shock.
- Never move the unit with the power cord plugged into the wall, as damage to the power cord may result.
- When unplugging the cord from the wall, grasp the plug, NOT the cord.
- Never install this product in humid or dusty locations, nor in direct sunlight, near sources of heat, or in areas where sooty smoke or steam are present. Fire and electric shock may result.
- Keep all sides of the unit at least 3½" away from objects that may obstruct air flow to prevent the unit's internal temperature rise.



CAUTION When The Product Is In Use

- Never place heavy objects on the product, causing it to fall and/or break, resulting in personal injury and property damage. In addition, the product itself may fall and cause injury and property damage.
- Contact Atlas Sound for instructions on cleaning the inside of the unit. Large accumulations of dust inside the unit may result in heat buildup and fire.
- Ensure that the power supply plug is securely plugged into the wall outlet. Never allow dust to accumulate on the power plug or inside the wall outlet.
- When cleaning the unit or the unit is not to be operated for an extended period, unplug the power cord from the wall.



**Atlas
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



Introduction

The Atlas Power ECM-15SH is a 120V 60Hz Electrical Control Module (ECM), 15A Single Housing (SH) Power Conditioner and AC Spike Suppressor that is designed to be used as a standalone unit or in conjunction with an Atlas Power Sequence controller ECS-6RM or the ECS-3 up to a 1000' away. The slim compact unit is designed to fit almost anywhere, even behind a Flat Screen Panel.

The ECM-15SH features noise filtering for unwanted Radio Frequency Interference (RFI) and Electromagnetic Interference (EMI) filters to reduce noise from such items as electric motors or switching power supplies. The benefit of these filters can be seen on video products or audibly by reducing static pops and external signal interference. If an AC spike or surge appears, the ECM-15SH also incorporates Clamping Suppression technology to prevent the unwanted energy from getting into your AV system. Other features include a Manual Bypass Switch, Incoming AC presence LED, Active LED and an AC Fault indicator. When interfaced with the ECS-6RM Sequencer controller, Extreme Voltage Shutdown Circuitry (EVS) is active, along with Voltage and Current status readings.

Key Features

- 2 Outlets, 15A
- RFI / EMI Noise Filtering
- Spike & Surge Suppression, DCS Circuitry
- Extreme Voltage Shutdown (EVS) Below 102V or Above 132V AC Line
- AC Fault indicator
- Fuse Protection @ 15A Slow Blow
- Manual Bypass Switch
- Incoming AC Presence LED
- Active Outlet LED
- Status Signals Output for Voltage and Current
- Compact to fit behind Flat Screens

Applications

The ECM-15SH is designed to be flexible for use in a variety of applications. When used with a sequenced controller it allows the turning of equipment on and off from a remote location to save energy and to reduce an in-rush of current that stresses the main AC line. It also can be used solely as a standalone unit for protection against voltage surges and EMI/RFI filtering to clean up the AC power at the load source. The following are just a few examples of applications in which the ECM-15SH can be used:

- Restaurants
- Houses of Worship
- Schools
- Home Theaters
- Office Buildings
- Sports Bars
- Industrial Facilities



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH **AC Power Conditioner & Suppression Module**

Internal Features of the ECM-15SH – Protection behind the panel

- EMI/RFI Filters – ECM filters for unwanted Radio Frequency Interference (RFI) that is commonly introduced into the AC lines by nearby radio transmitters or wireless products. EMI filters are incorporated to reduce noise from Electromagnetic Interference (EMI) produced by such items as electric motors, switching power supplies and lightning. The benefit of these filters can be seen on video products or audibly by reducing static pops and external signal interference.
- AC Spike Protection - ECM modules feature AC spike suppression. AC Spikes, or Transients, are commonly caused by lightning storms or utility power plant grid switchovers. The amount of energy that can be injected into the power system can be immense with voltages reaching 6KV or amperage peaks of 3000A. These spikes are very fast and usually only last for a very short period of time. To protect against this potential problem, incoming AC Mains have special suppression circuitry to eliminate the unwanted energy. This circuitry is very fast and can suppress unwanted energy within a nanosecond, while sustaining the suppression up to 2 milliseconds, thus ensuring virtually trouble free protection.
- AC Surge Protection - High line can also be known as surges. Surges usually are a slower steady state rise in voltages ranging from 128VAC and up. They can be caused by fluctuations in the utility company's power lines or industrial equipment turning on and off, and are on the same power leg of the building's incoming AC.
- EVS Protection – If an ECM Module is connected to the ECS-6RM, the ECS-6RM has built in intelligence that monitors the AC lines from the ECM modules and will inform you of potentially damaging voltages. If the AC Mains voltage is between 128VAC and 132VCA or 107VAC and 101VAC the display will flash an error code indicating a potential fault has occurred and you should check sensitive equipment. If an extreme voltage swing occurs above 128VAC or below 101VAC, the Extreme Voltage Shutdown (EVS) protection circuit will automatically turn all remote ECM modules off until the system is manually reset. The EVS feature can be defeated if required via the ECS-6RM EVS bypass switch.
- Over Current Protection – In the case of excessive current draw at the ECM module, an internal Slow Blow fuse will open and protect the devices plugged into the ECM module. **Note:** This fuse must be changed by a qualified service technician.

ECM Data Wire and Distance

The ECM-15SH is one of four different types of ECM Modules requiring the same interface connectivity to the ECS-6RM. All ECM Modules can be interfaced with the ECS-6RM. For connection between the ECS-6RM and an ECM module, use a 5 conductor cable that is a minimum of 22-gauge wire. We suggest using CAT5 cable due to the common availability and low cost. Heavy gauge wire or cable with a high voltage rating are not needed because the data signal and supply voltage are low current. Pay special attention to the port connections and DO NOT MISS WIRE or damage may occur. The distance between the ECS-6RM and the ECM Module can be up to 1000'.




**Atlas
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



Front Panel

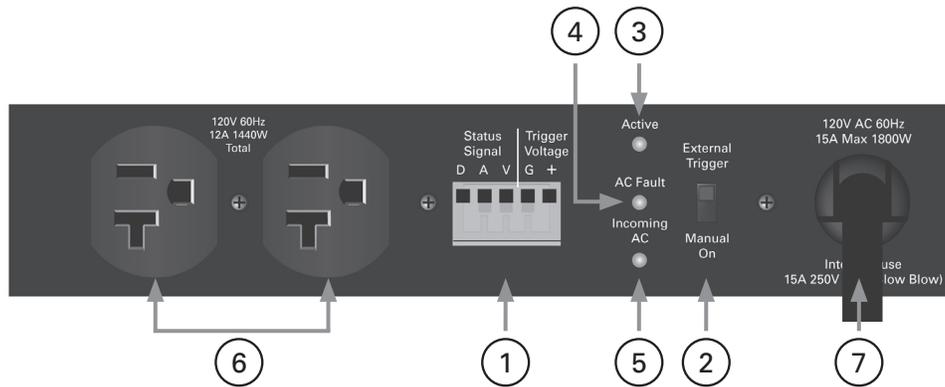

1. Trigger/Status Port Pin Identification

All signals are of low voltage and current. **DO NOT MISS WIRE** or damage may occur.

- A. (+) requires a minimum of 5–24V DC to activate the module with 5mA of current. **Note:** The DCV can be supplied from any source. The EVS protection requires the ECS-6RM for operation.
- B. G = Circuit Ground. Must be of the same circuit as the DCV source.
- C. V = AC Voltage Status Signal. Reports the Incoming AC Mains Voltage to the ECM module back to the ECS-6RM.
- D. A = AC Current Status Signal. Reports the AC Mains Current Draw to the ECM module back to the ECS-6RM.
- E. D = Fault Status Signal. Reports any fault conditions of an ECM module to the ECS-6RM.

2. External Trigger/Manual On Switch

The ECS-15SH has a manual override switch allowing it to be used as a local Power Conditioner and Surge Suppressor. For it to be remotely monitored and activated the switch must be in the “External Trigger” position.

3. Active LED

This LED will illuminate Green when the ECM module has sensed the proper DCV to activate the unit. **Note:** If connected to the ECS-6RM and the EVS circuit has been activated, this LED will not be lit. The Channel Status LED on the ECS-6RM will flash indicating a problem and the ECM module will not turn On until the AC Mains voltage is stable.

4. AC Fault LED

If damage to the Spike Suppression circuit occurs, this LED will illuminate Red. The module may still operate but may not be protecting the items plugged into the AC outlets. The ECM module should be inspected and repaired by a qualified technician.

5. Incoming AC LED

This LED will illuminate Red when the ECM has incoming AC power present at the module. This LED must be On to operate.

Note: If this LED is not illuminating check the following: 1) the unit is plugged in, 2) the AC Mains Breaker feeding the AC leg to the ECM module is On, 3) the internal fuse has been damaged. This should only be inspected by an authorized technician.

6. AC Mains Outlet

Two 120V AC 15A outlets.

7. AC Mains Power Cord

9' (3m) 14-gauge




1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH AC Power Conditioner & Suppression Module

Using the ECM-15SH as a Standalone Unit

The ECM-15SH can be used as standalone unit for local equipment protection. It does not need to be connected to an ECS-6RM to operate. You still get protection against AC spikes from lightning or short power surges and you get all the EMI/RFI power conditioning and filtering. What you do not utilize is the Extreme Voltage Shutdown (EVS) protection and Voltage and Current status readings. The ECM-15SH must be connected to an ECS-6RM to utilize all of the benefits of the ECM-15SH. To activate the ECM-15SH via an external contact closure or switch, place the slide switch to "External Trigger" and apply the contacts across terminals "+" and "D" shorting them together.

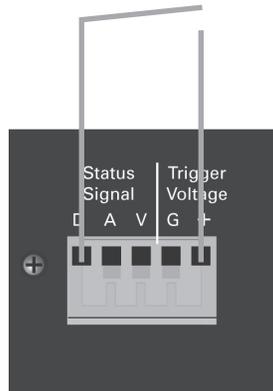


Remote Activation via Switch or DCV Trigger

To activate the ECM-15SH via a switch or DCV Trigger, apply DCV 5 -24VDC to the "+" and "G" terminals.

Wiring With an ECS-6RM Sequencer Controller


Example – ECS-6RM wired to 4 ECM-20 or ECM-20M Modules in the ECM-RACEWY6 and two separate ECM-15SH and ECM-20SH modules.

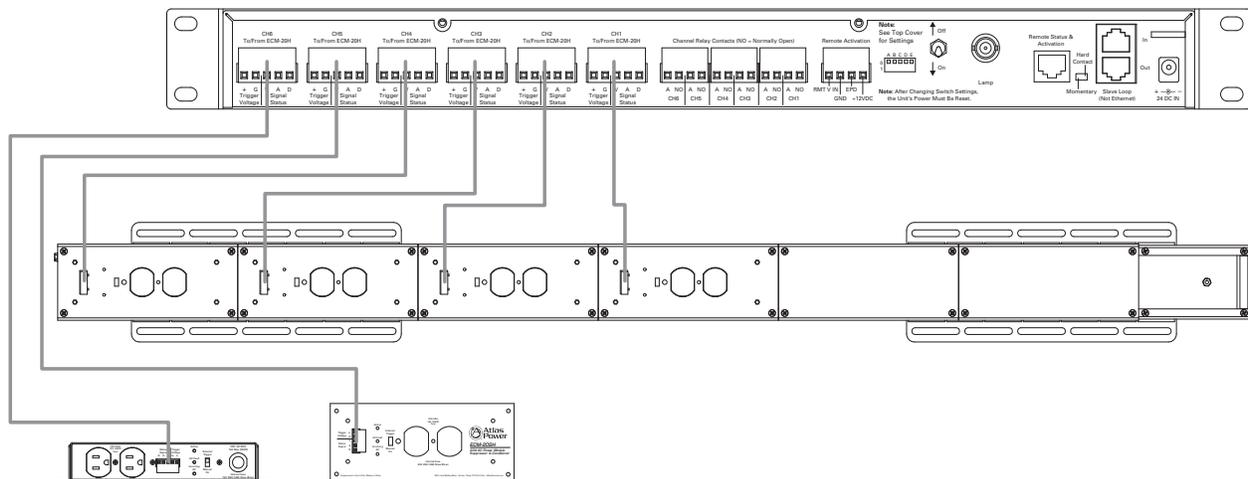

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435




ECS-6RM Sequencer Controller Interface with ECM-15SH

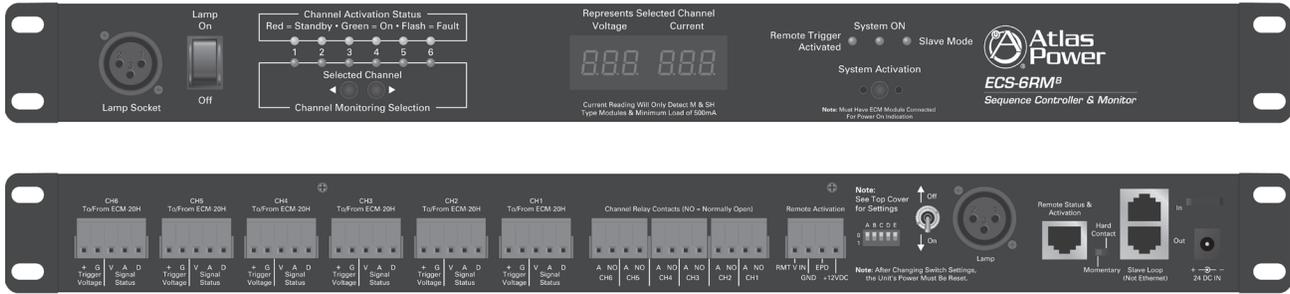

To get maximum use of the ECM-15SH we suggest using the ECS-6RM controller. When the two are interfaced the ECS-6RM controller not only can remotely turn on the ECM-15SH but it can monitor the AC Mains Voltage and Current of the ECM-15SH. When mated, the microprocessor in the ECS-6RM can determine if there are any potentially damaging AC Voltages present at the ECM-15SH and shut it Off before damage can occur to sensitive equipment connected.


1. ECM control ports – Up to 6 AC Main circuits can be activated or monitored by the ECS-6RM. Each ECM control port connects to one of the following ECM module, ECM-20M, ECM-15SH, ECM-20SH and the ECM-20. For connection between the ECS-6RM and an ECM modules use a 5 conductor cable that is a minimum of 22-gauge wire. We suggest using CAT5 cable due to the common availability. Pay special attention to the port connections and DO NOT MISS WIRE or damage may occur. The distance between the ECS-6RM and an ECM module can be up to 1000'.

(+) = 5VDC, G = Circuit Ground, V = AC Voltage Status Signal, A = AC Current Status Signal, D = Fault Status Signal, all signals are of low voltage and current.

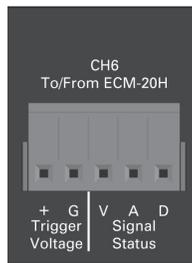

Single ECM-15SH Control Port

2. Relay Contacts – Each Channel of the ECS-6RM also has a Relay contact that works in conjunction with the ECM control port. Sequencing and timing of these connections are the same as the corresponding ECM channels. Example: Sequence 1 ECM Port output works at the same times CH 1 Relay contact. Note: All ECM modules can be trigger using the Relay contacts to activate the ECM module.

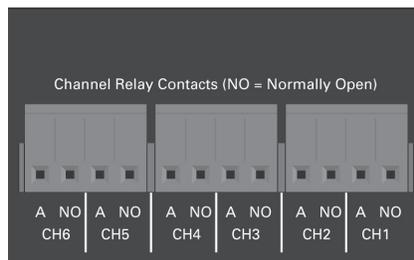

Relay Contacts



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435




ECM-15SH

AC Power Conditioner & Suppression Module


Wiring With an ECS-3 Sequencer Controller

ECM-15SH DCV Trigger - The ECS-3 can handle 15A of current before the breaker opens. If 15A is not enough current to support your power requirements you can use the 24VDC trigger to activate an additional power outlet such as the ECM-15SH. This triggered 24VDC voltage works in conjunction with Sequence 3 timing section. Contact Atlas Sound for AC outlet options.

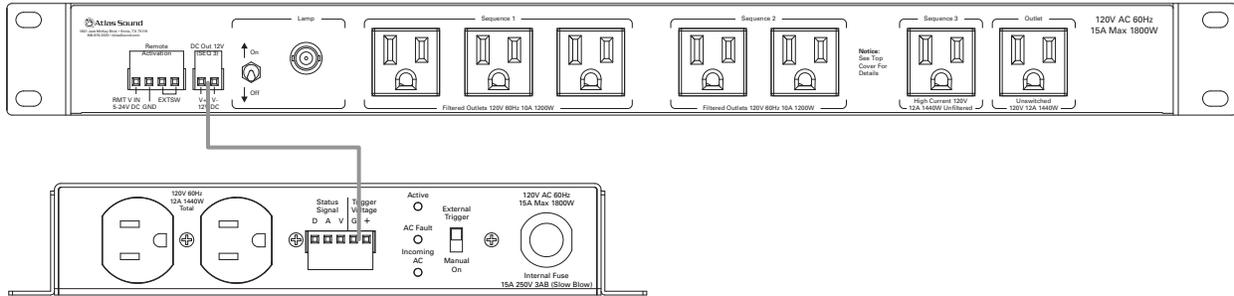

Mounting the ECM-15SH

Mounting Bracket - There are two adjustable mounting brackets incorporated. When mounting to a rack rail system use $10/32"$ x $1"$, when mounting to a wall surface use two #8 wood or metal screws. There are three screws per side for bracket placement. Each bracket has a slide slot to allow mounting height adjustment.

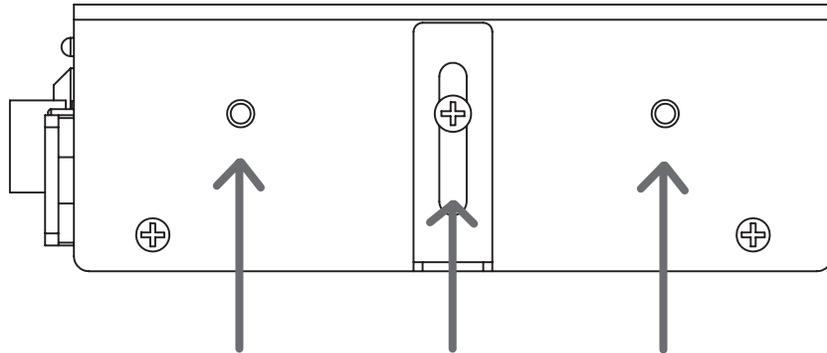

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



Troubleshooting the ECM Module as a Standalone unit

Note: All troubleshooting should be done by a certified electrician.

Issue 1: Incoming AC LED is Not Illuminated.

Possible Cause #1: Incoming AC mains circuit breaker has tripped due to excessive load.

Action Needed: Check the AC outlet that the ECM is plugged into for 120V AC voltage. If no voltage is present, check to see if the AC outlet is on a GFI and check to see if it was tripped. If it has not been tripped trace the AC Mains outlet back to the electrical panel and check the AC Mains breaker to see if it is tripped.

Possible Cause #2: AC mains power is OK (120V), internal 15A (ECM-15SH) Slow Blow fuse is blown.

Action Needed: Open ECM unit and replace the fuse with a Slow Blow type.

Issue 2: AC Fault LED is Illuminated.

Possible Cause: Although the Clamping Suppression circuit virtually assures protection from most transient voltage spikes and surges, nature has a way of occasionally creating electrical forces that are beyond the capabilities of any device to absorb without some degree of damage. In the rare instance that this occurs, the clamping circuit can be damaged during the suppression.

Action Needed: The unit will need to be repaired or replaced. It is important to have all equipment that was connected to that AC Mains Line to be inspected for proper operation.

Issue 3: ECM Active LED is not illuminated.

Possible Cause: Slide switch is not set to Manual ON.

Issue 4: Unit is set to External Trigger, the incoming AC LED is illuminated but the Active LED is not illuminated.

Possible Cause #1: External Switch is not connected across the "D" and "+" terminals.

Possible Cause #2: External DCV is not connected across the "+" and "G" terminals.

Possible Cause #3: External DCV voltage polarity is not correct across the "+" and "G" terminals.

Possible Cause #4: External DCV voltage is too low to activate the trigger circuit. Must be a minimum of 5VDC.

Troubleshooting the ECM Module with an ECS-3

Note: All troubleshooting should be done by a certified electrician.

Issue 1: Incoming AC LED on the ECM is not illuminated.

Possible Cause #1: Incoming AC mains circuit breaker has tripped due to excessive load.

Action Needed: Check the AC outlet that the ECM-15SH is plugged into for 120V AC voltage. If no voltage is present, check to see if the AC outlet is on a GFI and check to see if it was tripped. If it has not been tripped trace the AC Mains outlet back to the electrical panel and check the AC Mains breaker to see if it is tripped.

Possible Cause #2: AC mains power is OK (120V), internal 15A (ECM-15SH) Slow Blow fuse is blown.

Action Needed: Open ECM unit and replace the fuse with a Slow Blow type.

Issue 2: AC Fault LED is Illuminated on the ECM.

Possible Cause: Although the Clamping Suppression circuit virtually assures protection from most transient voltage spikes and surges, nature has a way of occasionally creating electrical forces that are beyond the capabilities of any device to absorb without some degree of damage. In the rare instance that this occurs, the clamping circuit can be damaged during the suppression.

Action Needed: The unit will need to be repaired or replaced. It is important to have all equipment that was connected to that AC Mains Line to be inspected for proper operation.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH **AC Power Conditioner & Suppression Module**

Issue 3: Unit is set to External Trigger, the incoming AC LED is illuminated but the Active LED is not illuminated.

Possible Cause #1: External DCV from the ECS-3 is not connected across the "+" and "G" terminals.

Possible Cause #2: External DCV voltage polarity is not correct across the "+" and "G" terminals.

Possible Cause #3: External DCV voltage is too low to activate the trigger circuit. Must be a minimum of 5VDC to activate the ECM module. Possible short in the wiring system.

Issue 4: ECM Active LED is not illuminated, incoming LED is illuminated but the Abnormal LED on the ECS-3 is flashing.

Possible Cause: The AC Mains Voltage exceeded 127VAC or the voltage dropped below 107VAC activating the "EVS" shutdown.

Action Needed: The ECS-3 must be re-sequenced to turn off the LED, measure the AC mains before restarting the ECS-3. If the voltage is between 117VAC and 123VAC you may proceed to reset the ECS-3 by restarting the start up sequence. NOTE: It is important to have all equipment that was connected to that AC Mains Line inspected for proper operation. If the problem persists, contact your local power company for the cause of unstable AC line conditions.

Troubleshooting the ECM Module with an ECS-6RM

Note: All troubleshooting should be done by a certified electrician.

Issue 1: Incoming AC LED on the ECM is not illuminated.

Possible Cause #1: Incoming AC mains circuit breaker has tripped due to excessive load.

Action Needed: Check the AC outlet that the ECM-15SH is plugged into for 120V AC voltage. If no voltage is present, check to see if the AC outlet is on a GFI and check to see if it was tripped. If it has not been tripped trace the AC Mains outlet back to the electrical panel and check the AC Mains breaker to see if it is tripped.

Possible Cause #2: AC mains power is OK (120V), internal 15A (ECM-15SH) Slow Blow fuse is blown.

Action Needed: Open ECM unit and replace the fuse with a Slow Blow type.

Issue 2: AC Fault LED is illuminated on the ECM.

Possible Cause: Although the Clamping Suppression circuit virtually assures protection from most transient voltage spikes and surges, nature has a way of occasionally creating electrical forces that are beyond the capabilities of any device to absorb without some degree of damage. In the rare instance that this occurs, the clamping circuit can be damaged during the suppression.

Action Needed: The unit will need to be repaired or replaced. It is important to have all equipment that was connected to that AC Mains Line inspected for proper operation.

Issue 3: Unit is set to External Trigger, the incoming AC LED is illuminated but the Active LED is not illuminated.

Possible Cause #1: External DCV from the ECS-6RM is not connected across the "+" and "G" terminals of the ECM module.

Possible Cause #2: External DCV voltage polarity is not correct across the "+" and "G" terminals.

Possible Cause #3: External DCV voltage is too low to activate the trigger circuit. Must be a minimum of 5VDC to activate the ECM module. Possible short in the wiring system.

Issue 4: ECM Active LED is not illuminated, incoming LED is illuminated but the Abnormal LED on the ECS-6RM display is flashing "OL" and the ECS-6RM Channel that is activating the ECM module Status LED is Flashing.

Possible Cause: The AC Mains Voltage exceeded 127VAC or the voltage dropped below 107VAC activating the "EVS" shutdown.

Action Needed: The ECS-6RM must be resequenced to turn off the reset the circuit, measure the AC mains before restarting the ECM module. If the voltage is between 117VAC and 123VAC you may proceed to reset the ECS-6RM by restarting the start up sequence. NOTE: It is important to have all equipment that was connected to that AC Mains Line inspected for proper operation. If the problem persists, contact your local power company for the cause of unstable AC line conditions.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



Issue 5: ECS-6RM Channel Activation Status LED is flashing and AC power at the ECM module is active.

Possible Cause: The AC Mains Voltage at the ECM Module reached between 127- 132VAC or the voltage dropped between 107 - 101VAC.

Action Needed: The ECS-6RM must be re-sequenced to turn off the LED, measure the AC mains before restarting the ECM Module. If the voltage is between 117VAC and 123VAC you may proceed to reset the ECS-6RM by restarting the start up sequence. NOTE: It is important to have all equipment that was connected to that AC Mains Line inspected for proper operation. If the problem persists, contact your local power company for the cause of unstable AC line conditions.

Issue 6: No Voltage Reading at the ECS-6RM.

Possible Cause #1: Check Issues 1 - 4 first.

Possible Cause #2: Proper Channel is not selected for viewing.

Possible Cause #3: Channel Activation LED is Illuminated Green but the Voltage display is not on. Check the wiring between the ECS-6RM Channel and the ECM module. "V", "A" and "D" must be in the correct polarity.

Issue 6: No Current Reading at the ECS-6RM, meter reads 'nA'.

Possible Cause #1: An ECM-15 Module is connected. This module does not support current read out.

Possible Cause #2: Check Issues 1 - 4 first.

Possible Cause #3: Current Draw of ECM Module must exceed 500mA to register.

Possible Cause #4: Proper Channel is not selected for viewing.

Possible Cause #5: Channel Activation LED is Illuminated Green but the Current display reads "nA". Check the wiring between the ECS-6RM Channel and the ECM module. "V", "A" and "D" must be in the correct polarity.





AC Power Cord Retainer System



Your Atlas Power product comes with an AC Mains Power Cord Retainer System. This system prevents the power cord from being removed without the use of a screwdriver. Follow these steps for installation.

Note: Installation of this product must be done by a certified electrician for a permanently connected apparatus provided neither with an all-pole mains switch nor an all-pole circuit breaker. A readily accessible disconnect device shall be incorporated in the building installation power wiring. The installation shall be carried out in accordance with all applicable installation rules in accordance with all applicable federal, state, and local laws, regulations, safety codes and ordinances.

1. Locate the 6/32 screw, retainer clip, and zip tie.
2. Locate the AC wall outlet that will be used to power the Atlas Power product. Remove the center screw securing the cover plate to the AC outlet.
4. Wrap the zip tie around the power cord as shown in Figure 4.



Figure 1

3. Place the screw through the retainer clip and insert into the cover plate making sure to securely tighten. Inset the zip tie through the retainer clip slots as shown in Figure 3.

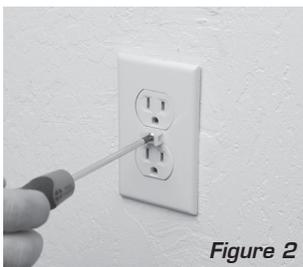


Figure 2



Figure 3

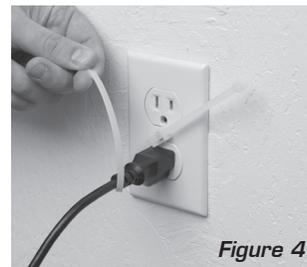


Figure 4

5. Feed the end of the zip tie through the retainer and pull tightly to secure. **Note:** Some adjustment of the retainer may be needed in order to properly align it as shown in Figure 6.

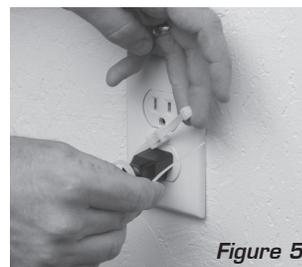


Figure 5



Figure 6

6. Cut the excess zip tie off as shown in Figure 7.



Figure 7





ECM-15SH Specifications

Type	AC Power Conditioner Suppression Module
RoHS Compliant	Yes
Safety Listings	ETL (UL 60065 Standard)

Front Panel

Outlets	Two, 15A
Indicators	Active (Green), Fault (Red), Incoming AC (Red)
Manual Override	Slide Switch
Connectors	5 Position Phoenix Euro Block Style
Hard Switch Remote Trigger	SPST Contact
Status Signals	Output for Voltage and Current Data (All data signals are low voltage and current)
Spike & Surge Suppression	H-N, N-G, H-G
Fuse Protection	15A Slow Blow
Power Cord	9ft (3m), 14 gauge

Technical Data

Current Rating	15A
Operating Voltage	102VAC - 132VAC
Power Consumption	500 milliwatts
Power Requirements	120V 60Hz
Extreme Voltage Shutdown	(EVS) Below 102V or above 132V AC Line (When used with ECS-6RM)
DCV Remote Trigger	5-24DCV
High Voltage Surge Protection	Trigger at 133VAC, 1ms typically (When used with ECS-6RM)
Low Voltage Surge Protection	Trigger at 101VAC, 1ms typically (When used with ECS-6RM)
Spike and Surge Suppression	Hot to Neutral, Hot to Ground, Neutral to Ground
Spike Protection Modes	Circuitry on Incoming AC Mains
Min. Spike Clamping Voltage	460 VRMS @ 3,000 amps
Max. Spike Clamping Voltage	6kV
Max. Spike Clamping Resp. Time	<1 nanosecond
Spike Clamping Voltage @ 100A	1,250Vp for 20μs
Maximum Surge Current	6,500A
Energy Rating	600 Joules
Noise Attenuation EMI/RFI Sequencer	10dB @ 10 kHz, 40dB @ 100 kHz, 100dB @ 10MHz
Temperature Range	5° – 35°C
Humidity Range	5% to 95% R.H.

Mechanical

Chassis Finish	Black
Mounting	Side Bracket Adjustable
Height	1.75" (45mm)
Width	8.5" (216mm)
Length	5.0" (127mm)
Weight	4.5 lbs (2.04kg)



**Atlas
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435



ECM-15SH **AC Power Conditioner & Suppression Module**

Limited Warranty

All products manufactured by Atlas Sound are warranted to the original dealer/installer, industrial or commercial purchaser to be free from defects in material and workmanship and to be in compliance with our published specifications, if any. This warranty shall extend from the date of purchase for a period of three years on all Atlas Sound products, including SOUNDOLIER brand, and ATLAS SOUND brand products except as follows: one year on electronics and control systems; one year on replacement parts; and one year on Musician Series stands and related accessories. Additionally, fuses and lamps carry no warranty. Atlas Sound will solely at its discretion, replace at no charge or repair free of charge defective parts or products when the product has been applied and used in accordance with our published operation and installation instructions. We will not be responsible for defects caused by improper storage, misuse (including failure to provide reasonable and necessary maintenance), accident, abnormal atmospheres, water immersion, lightning discharge, or malfunctions when products have been modified or operated in excess of rated power, altered, serviced or installed in other than a workman like manner. The original sales invoice should be retained as evidence of purchase under the terms of this warranty. All warranty returns must comply with our returns policy set forth below. When products returned to Atlas Sound do not qualify for repair or replacement under our warranty, repairs may be performed at prevailing costs for material and labor unless there is included with the returned product(s) a written request for an estimate of repair costs before any non-warranty work is performed. In the event of replacement or upon completion of repairs, return shipment will be made with the transportation charges collect.

EXCEPT TO THE EXTENT THAT APPLICABLE LAW PREVENTS THE LIMITATION OF CONSEQUENTIAL DAMAGES FOR PERSONAL INJURY, ATLAS SOUND SHALL NOT BE LIABLE IN TORT OR CONTRACT FOR ANY DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE INSTALLATION, USE OR INABILITY TO USE THE PRODUCTS. THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Atlas Sound does not assume, or does it authorize any other person to assume or extend on its behalf, any other warranty, obligation, or liability. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Service

Should your ECM-15SH require service, please contact the
Atlas Sound warranty department at
1-877-689-8055, ext. 277 to obtain an RA number.

Atlas Sound Tech Support can be reached at 1-800-876-3333.

Visit our web site at www.AtlasSound.com to see other Atlas products.



©2012 Atlas Sound L.P. All rights reserved. Atlas Sound and Atlas Power are trademarks of Atlas Sound L.P.
All other trademarks are the property of their respective owners. ATS003505 RevB 03/12



**Atlas
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435