



Z Series

Firmware Update Guide


1. Compare the firmware loaded on the device to the latest firmware on the AtlasIED web site.
2. If there is a newer firmware available, download the firmware from <https://www.AtlasIED.com/Z4-b> (or Z2-b)
3. **Example:** The file will be a compressed folder and look like this: Z4_Series_V1_48.bin (do not Extract it)
4. Save any custom project settings to a USB drive before updating the firmware. Refer to the Z Series Owner's Manual under "Creating Custom Projects Files" for detailed instructions.
5. In the Menu Tree, navigate down to the Firmware page and press (>)

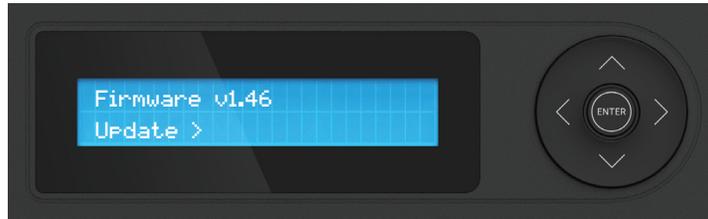

6. Insert the USB drive with new Z2 or Z4 FW on the Root directory and press (>) to update. Follow the prompts:

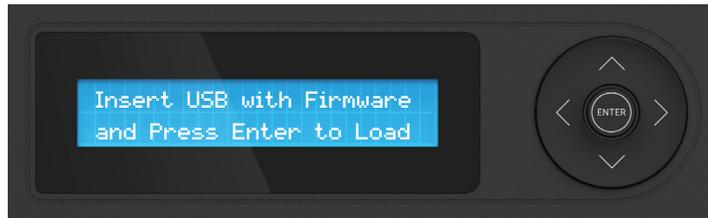

7. After pressing Enter, the screen will say "searching"; "FW Updating..."; "Successful"; then "Booting..."

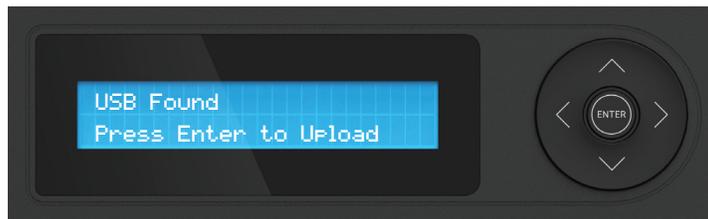

8. After the FW update is complete, the Z2 or Z4 will return to the Home Screen. Remove the USB drive.
9. Navigate to the "Clock and Date" Menu and enter the current date and time.
10. To upload a saved Project File, navigate to the "Upload from USB" Menu and follow the prompts. The uploaded file will become the active project.
11. Navigate to the "Pair Z Signs" Menu and re-pair any Z-SIGNS.