


Installation Notes:

- 1. The 1/4-20 Carriage Bolts Get Installed From The Inside Of The Cabinet.
- 2. The Brackets And Casters Mount Underneath The Cab' 1/4 I With The Bracket Flanges Facing Down. The Brackets Are Designed To Extend From The Front Of The Cabinet To The Rear Of The Cabinet.

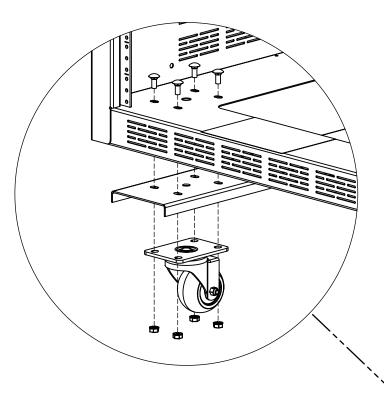

RCK-18	RCK-24	RCK-30
121-18	221-25	221-30
124-18	224-25	224-30
135-18	235-25	235-30
140-18	240-25	240-30
144-18	244-25	244-30
221-18	535-25	544-30
224-18	540-25	
235-18	544-25	
240-18		
244-18		



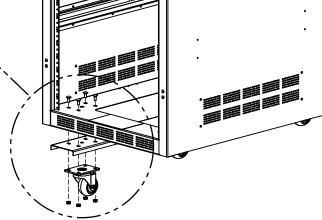

©2012 Alas Sound L.P. All rights reserved. Atlas Sound is a trademark of Atlas Sound L.P. All other trademarks are the property of their respective owners. All specs are subject to change without notice. ATS004374 RevA 5/12