

TT-CLIP

Texas Tough DIN Rail Mounting Adaptor Install Sheet



Items Included:

- (2) U-Clips
- (2) Locking Combs
- (2) $^{1}/_{4}$ -20 x 0.5" Screws
- 1. Place U-Clip on DIN rail in the desired position, making sure slots in the U-Clip align with the slots in the Din Rail.



2. Insert Locking Comb into U-Clip. Push the Locking Comb all the way through the U-Clip and DIN rail, locking the U-Clip in place.













Copper Bus Grounding Bar

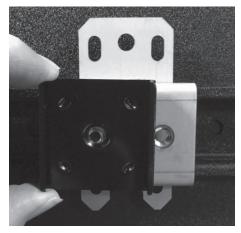

Atlas Power Mounting Clip


5. Take the included $^{1}/_{4}$ -20 x 0.5" screw and secure the accessory to the U-Clip.

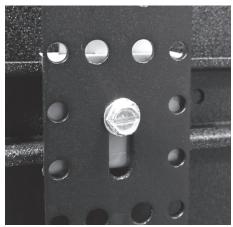

Vertical Lacing Bar



Copper Bus Grounding Bar

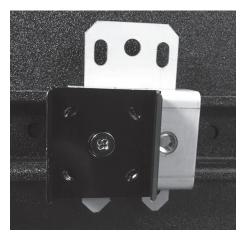

Atlas Power Mounting Clip

6. Repeat Steps 4-6 as many times as needed for the amount of U-Clips being used to securely attach the accessory to the DIN rails.