


IEDA528 MIC STATION - STRAIN RELIEF BRACKET INSTALL



PARTS REQUIRED TO INSTALL

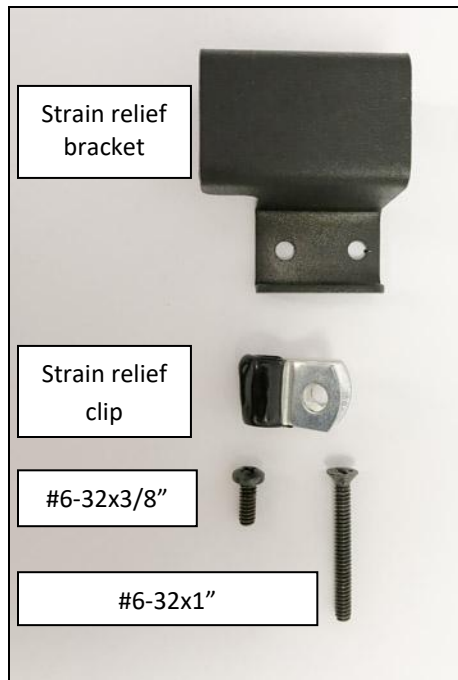

STEP 1 – Remove screw from existing strain relief clip and lower right mounting hole. Adjust clip 1" away from RJ25 plug. If no strain relief clip is present, install the included one at this location.



STEP 2 – Gently bend the cord down to place the new bracket over the connector. Align the two holes with the faceplate and install the #6-32x3/8" screw in the top hole to hold the bracket in place.



STEP 3 – Hold the strain relief clip in place over the bottom hole and install #6-32x1-1" flat head screw to secure clip. Tighten both screws to complete installation.